


WARNING
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

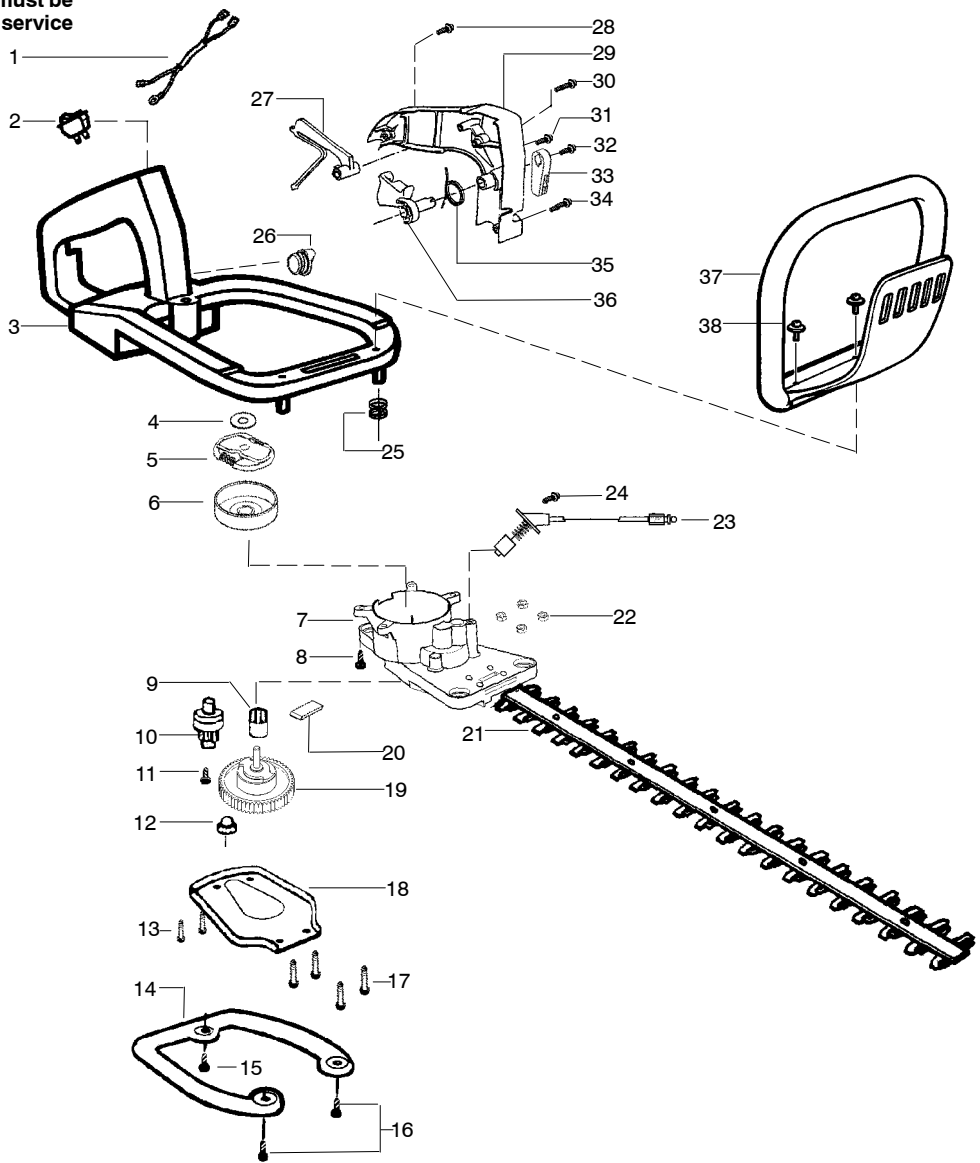

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530054133	Assy-Leadwire/Switch (Incl.#2)	20.	530029948	Seal-Blade (Felt)
2.	530029954	Switch-Ignition	21.	530403229	Assy-Blade 22"
3.	530071655	Assy-Rear Handle & Tank	22.	545009101	Nut
4.	530015611	Washer-Clutch	23.	530057819	Assy-Cable Stop
5.	530071803	Kit-Clutch Assy.	24.	530015934	Screw
6.	530150583	Assy-Drum	25.	530029946	Spring
7.	530071932	Kit-Gear Box (incl.# 9,10,11,13,17,22)	26.	530047877	Assy-Fuel Cap
8.	530015886	Screw	27.	530059104	Lockout-Throttle
9.	530016013	Bearing-Gear	28.	530015934	Screw
10.	530096258	Assy-Pinion	29.	530057821	Cover-Handle
11.	530015805	Screw	30.	530015940	Screw
12.	530032121	Bushing-Blade	31.	530015934	Screw
13.	530015940	Screw	32.	530015775	Screw
14.	530036046	Plate-Isolator	33.	530057818	Lever-Trigger
15.	530015849	Screw	34.	530016406	Screw
16.	530015934	Screw	35.	530036123	Spring-Trigger
17.	530016472	Screw	36.	530053884	Trigger
18.	530029916	Cover-Gear Box Plate	37.	530094992	Handle-Front
19.	530071777	Kit-Drive Gear Ass'y. (Incl. #12)	38.	530015955	Screw

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
 ● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.